


Main Panels

Panel, BASIC, 380V, CE, 16-0062-9

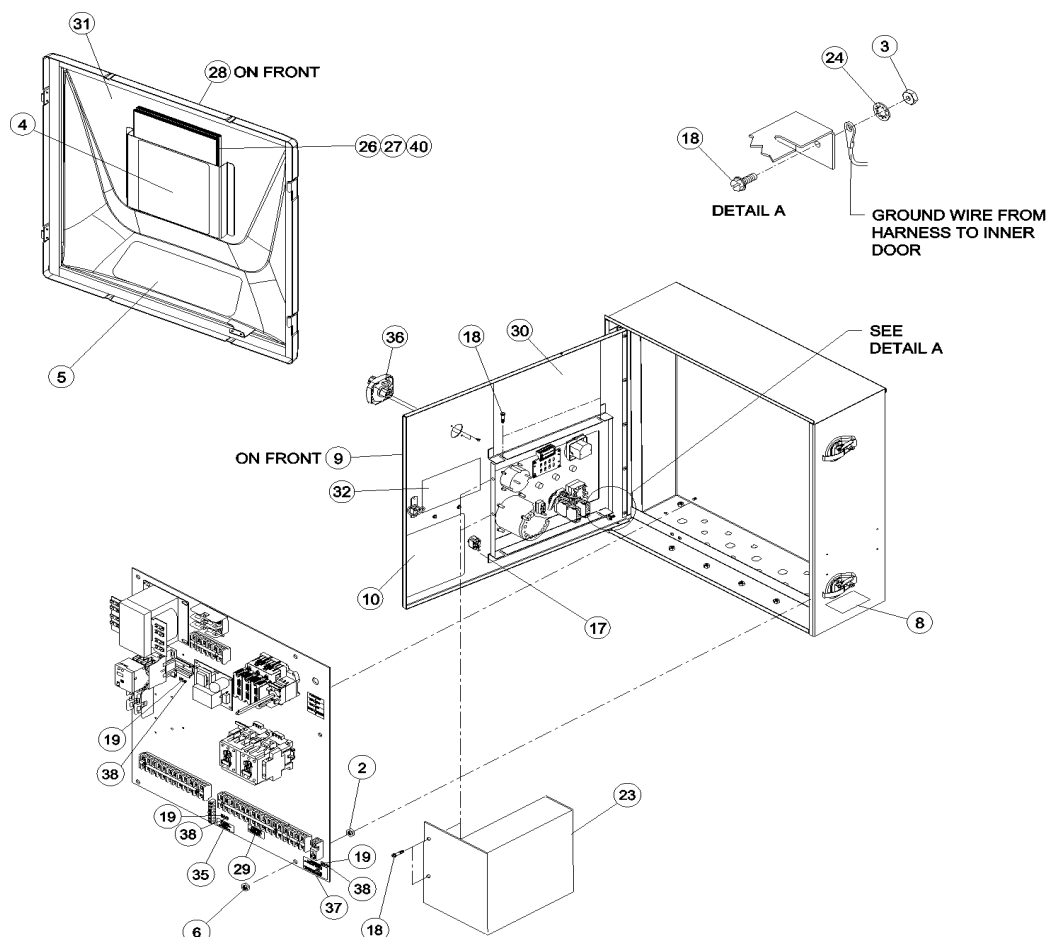

Ref.	Original Part No.	Substitute Part No.	Description
1	03-2765-0		Kit, Main Panel, Hardware
2	06-0822-4		Nut, 5/16-18, Hex
3	06-0848-9		Nut, #10-32, Hex
4	06-3453-5		Decal, "Caution", Main Panel
5	16-0019-8		Decal, "Danger", Tow, "Caution" Rst
6	06-4267-8		Nut, 1/4-20, Lock, Nylon Insert
7	09-0816-0		Tie, Cable, Plastic, 5-1/2" Long
8	09-1248-5		Decal, "Danger", Machine Ground
9	16-0004-2		Decal, BASIC/BOSS, Inner Door
10	09-7263-8		Decal, "Warning", Main Panel
11	09-7608-4		Term., Wire, B, #16-14, Spade 8
12	09-7610-0		Term., Wire, C, #16-14, Spade 10
13	09-7614-2		Term., Wire, F, #10-12, Spade 10
14	09-8915-2		Decal, "Caution", Restart
15	09-9211-5		Terminal, Slip-On, 16-14-1/4"
16	14-8388-0		Terminal, 1/4", Slip-On, Piggyback
17	09-9230-5		Switch, Toggle, SPDT, On/On
18	10-2899-2		Screw, #10-24 x 1/2", Hex, S.T.
19	11-7357-4		Decal, Protective Earth (GRD)
20	11-7393-9		Terminal, Tubular, 10 AWG

Ref.	Original Part No.	Substitute Part No.	Description
21	11-7398-8		Terminal, Tubular, 16 AWG
22	11-4819-6		Term., Wire, #10-12, Ring, #10
23	11-7470-5		Shield, Components, Inner Door
24	11-8015-7		Washer, Lock, #10, I-Tooth
25	11-7337-6		Tubing, Corrugated Loom, 0.915"ID
26	11-8291-9		Manual, Operation, Center Pivot
27	11-8297-3		Manual, Operation, FieldBAS/BOSS
28	16-0007-5		Decal, Zimmatic, Outer Door
29	11-9047-0		Decal, Terminal Torque
30	11-7732-8		Decal, Schematic, 10W, CE
31	11-9152-0		Decal, Troubleshooting, BASIC
32	11-9180-0		Decal, Component I.D., BASIC
33	11-9515-0		Bracket, Panel Mount, Lower
34	11-9516-0	1600155	Bracket, Panel Mount, Upper
35	13-7555-0		Decal, Terminal Torque, Groundbar
36	1602086		Disconnect, (KIT) IEC 1600943
37	13-9974-0		Decal, Term. Torque
38	14-8366-0		Decal, Yellow/Green, "PE"
39	14-8590-0		Latch, Spring, Key, CE
40	11-9045-0		Insert, Position, Overlay